


PERFECT FIT ROLLER BLIND MOTORISED

Fitting Instructions



FITTING CORNER JOINTS

Slide the curved aluminium frame into the idle corner joint.
Do this by sliding the joints into your frame section.

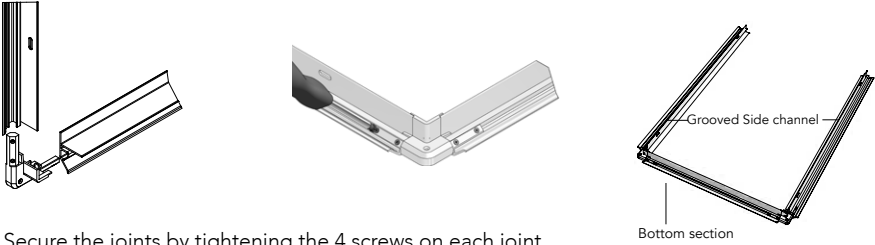

Secure the joints by tightening the 4 screws on each joint.


FITTING PUSH FIT CORNER JOINTS

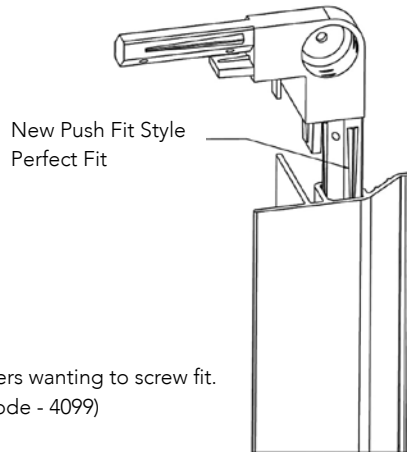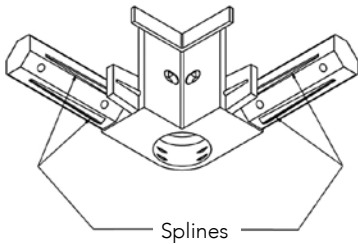

**Screw holes have been retained for customers wanting to screw fit.
Screws must be purchased separately (Part Code - 4099)

FINAL FRAME JOINT

Slide the curved aluminium frame into the idle corner joint.

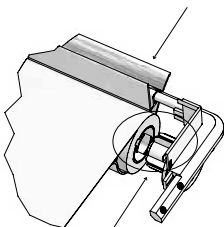


The simplest way to do this is to slide the leg of the corner joint into the curved section.



Before the leg is all the way in, ensure that the bush on the corner joint lines up with the top tube.

BLIND ASSEMBLY

Slide the motor end joint into the opposite end. (ensure it faces the front of the blind)


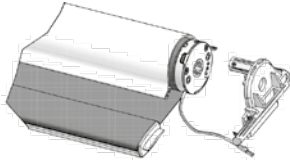


Once assembled, slide the roller blind over the end set assembly until it will go no further.

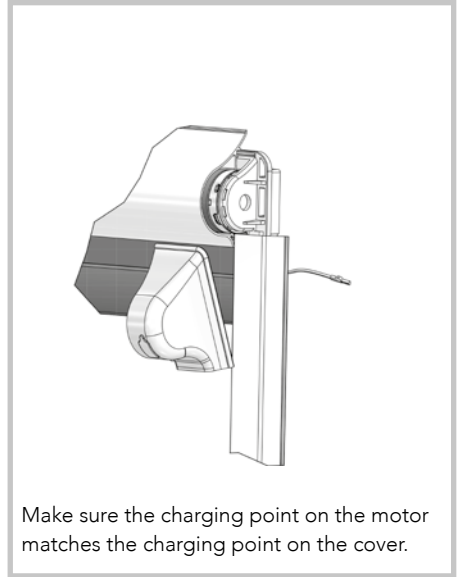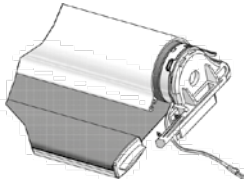

FITTING CURVED TOP SECTION

Slide top of curved section into the rest of the frame, ensuring that end caps are located into the side channel.

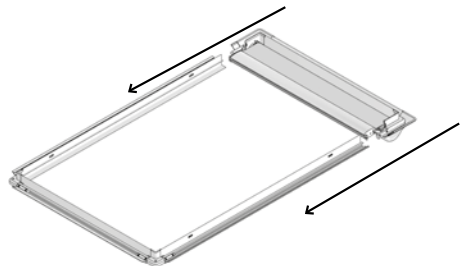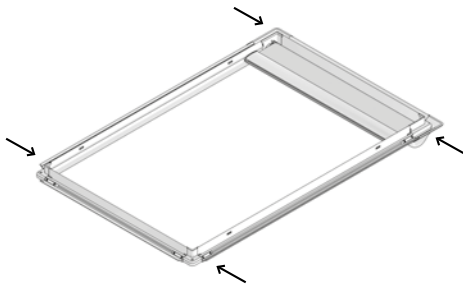


FITTING THE BRACKETS

To ensure all brackets are in the correct position for fitting (85mm from beading) use a credit card in the corner of the window to locate the bracket position.

For ease of insertion, use a lubricant in the form of washing up liquid on the base of each bracket.

Line up the bracket with the base or top of the credit card (depending on which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window.


Line up bracket with edge of card

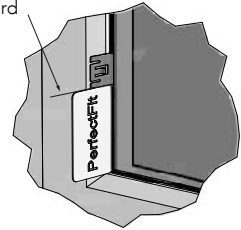

Repeat for all 4 corners of the window, and intermediate brackets (if required) then clean excess lubricant prior to fitting the frame.

FITTING THE FRAME INTO THE WINDOW


Line up the holes in the frame with the brackets.

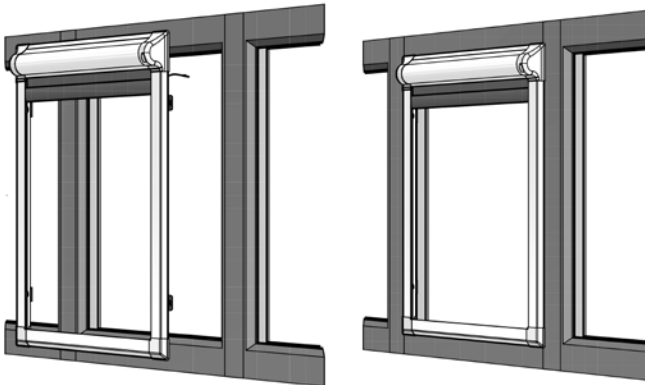

Firmly press the frame down onto each bracket.

Fit one side at a time for an easier installation (if handle is present fix this side first).

CHARGING THE MOTOR

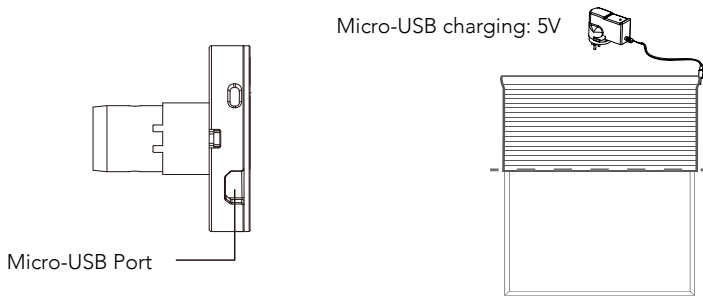


This motor has a 8V built in Li-ion battery pack with integrated charge management.


Max power input for recharging: 5V 2A.

Before first use please charge motor for 6 hours using 5V charger.


Remember to unplug the charger as soon as the motor is fully charged.

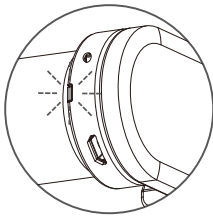

Blinking green
during operation;
charge the battery

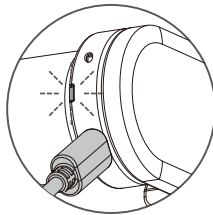


Blinking green;
battery is charging

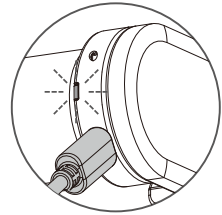

Continuously green;
battery is fully charged

15 CHANNEL REMOTE UNIT

1 jog = 1 movement, up OR down
2 jogs = 1 movement, up AND down

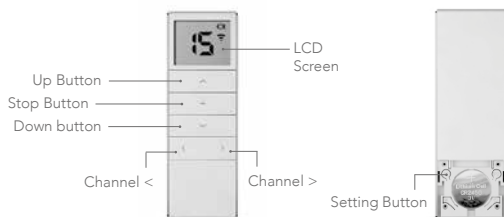

STEP 1 - PAIRING THE HANDSET WITH THE MOTOR

Note: During the setting procedure, the time between two operations must not exceed 4 seconds as this will cause the setting up process to quit.

- Switch on the power to the motor.
- Remove the battery cover on the reverse of the remote. There are two setting buttons (P2) on either side of the battery, press either one.
- Select a channel from 1 - 15 on the remote by pressing channel up or down (< or >).
- Press the button on the motor and the motor will jog up and down.
- Press P2 twice then the up or down button once. The motor will jog twice each time.
- To change direction press and hold the button on the motor for 4 jogs.

The motor and remote are now paired.

STEP 2 - SETTING THE LIMITS

Select the same channel and set the top limit.

- Press P2, then the up button followed by P2 again, the motor will jog twice and beep.
- Press the up button and the blind will start to rise.
- Press P2 and the blind will go into slow jog mode.
- Press the stop button on the remote and the blind will stop.
- Hold the stop button down until the motor jogs twice, this will set the top limit.
- Press the down button and the blind will start to go down.
- Press P2 and the blind will go into slow jog mode.
- Press the stop button on the remote and the blind will stop.
- Press and hold the stop button down until the motor jogs twice, this will set the lower limit.

Setting is complete. For more blinds, select another channel on the remote and repeat from step 2.

STEP 3 - SETTING A THIRD POSITION

- Switch the motor into jog mode by pressing P2 then up then down (this allows you to move the blind up or down in small increments)
- Move the blind using the up and down buttons on the remote to the desired position.
- When you have reached the desired position press stop, P2, stop, stop. The mid position is now set.
- The motor needs to be switched out of jog mode, this is done by pressing P2 then up then down.
- To operate the third position, press and hold the stop button and the blind will move to its third position.
- To delete the third position, press P2, followed by the stop button twice, the motor will jog twice.

SPEED ADJUSTMENTS

- The motor has three different speeds.
- To speed the motor up press stop and up together until the motor jogs.
- To slow the motor down press stop and down together until the motor jogs.
- If the motor does not jog it is at its maximum or minimum speed already.

DELETING A LIMIT

- To delete a limit, press P2 followed by the down button then press P2 again, the motor will jog twice.

DELETING A HANDSET

- To delete a handset, press P2 then the stop button followed by P2 again, the motor will jog twice.

ADDING A HANDSET

- To add a handset, press P2 twice on the existing handset. Then press P2 on the new handset, the motor will jog twice.

To perform a factory reset press and hold the button on the motor for 6 jogs.

NOTES

SAFETY NOTE

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** the drive shall be disconnected from its power source during cleaning, maintenance and when replacing parts.
6. The instructions shall state that the A-weighted emission sound pressure level of the drive is equal to or less than 70 dB(A), e.g. by writing $LpA \leq 70$ dB(A).
7. The mass and the dimension of the driven part shall be compatible with the rated torque and rated operating time.
8. The type of driven part the drive is intended for.
9. **WARNING:** Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.
10. Do not allow children to play with fixed controls. Keep remote controls away from children.
11. Frequently examine the installation for imbalance and signs of wear or damage to cables and springs. Do not use if repair or adjustment is necessary.
12. Watch the moving blind and keep people away until the blind is completely closed.
13. **WARNING:** Important safety instructions. Follow all instructions, since incorrect installation can lead to severe injury.
14. Before installing the drive, remove any unnecessary cords and disable any equipment not needed for powered operation.

Technical specification

Input voltage: 3V (CR2450)
Transmitting frequency: 433MHz
Transmitting power: 10 milliwatt
Operating temperature: -10°C to 50°C
Transmission distance: 200 metres open office, 35 metres on two walls

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Notice:
Do not expose the unit to moisture or heat. When you use the control unit, if emission distance is short and less effective, please replace battery. Please recycle batteries.