



ROLLER SYSTEM DRIVE LINK

Fitting & Operating Instructions


RIGHT HAND CONTROL

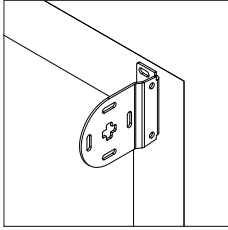


1. Starting at the control end side, place and secure a control end bracket at the measurement taken.

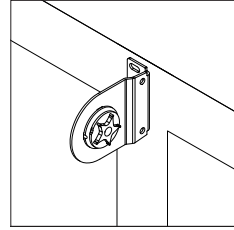

2. Place an intermediate bracket at the intermediate point 2mm less than the size taken, ensuring the central face of the intermediate bracket lines up accordingly.

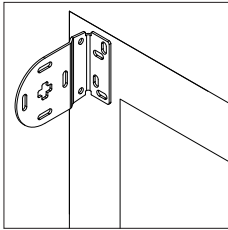


3. Locate and secure a control end bracket for the last blind.

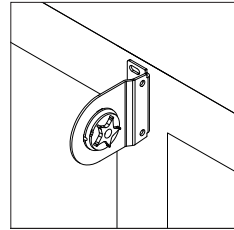


4. Place an intermediate bracket at the intermediate point 5mm less than the size taken, ensuring the central face of the intermediate bracket lines up accordingly.

FITTING THE BLINDS

Fitting the control end blind


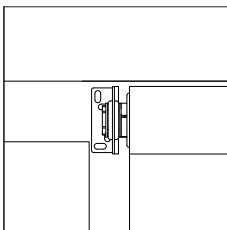


5. Insert Coupling Plunger end through the intermediate bracket.

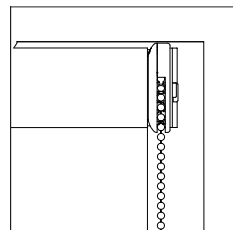

6. Locate, insert and secure control end.



Fitting Intermediate Blind

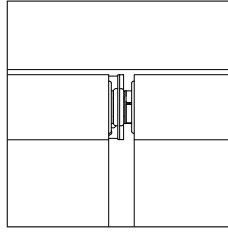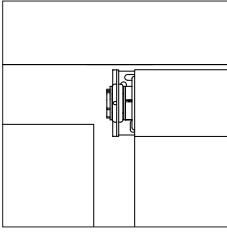

7. Insert Coupling Plunger end through the intermediate bracket.

8. Depress the coupling plunger and then locate and secure fixed end into first blind.



Fitting the End Blind

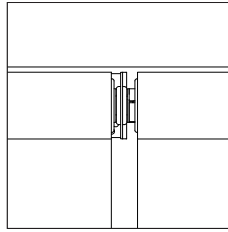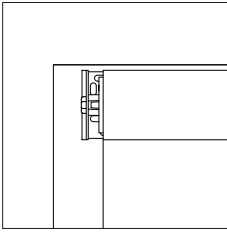

9. Depress idle end plunger into the idle end bracket.

10. Depress the idle end and locate and secure fixed end into previous blind.

ADJUSTING THE BLIND

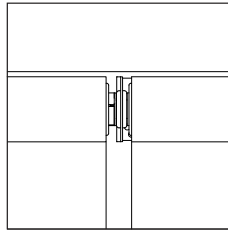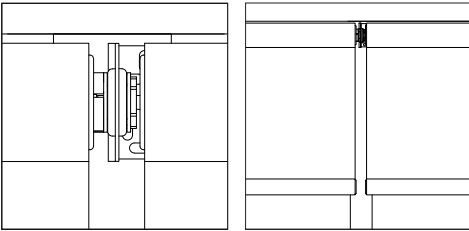

11. Adjust the blind to be level with the control blind. Depress the coupling plunger until the blind is free to turn, (drive connector and coupling fixed end disengage) turn blind until bottom bars are level.

12. Lock the coupling fixed end back into the drive connector.

REMOVING BLINDS

IMPORTANT NOTE: WHEN REMOVING BLINDS, BLINDS MUST BE REMOVED FROM THE IDLE END ONWARDS. The blinds must be removed in order from the idle end side first or blinds will drop.

CHILD SAFETY

Unless your blind is motorised has a safety wand or is crank operated your blind will be supplied with either Easybreak® connectors attached to the operating chain, or a cord tidy that will need to be fitted to the wall.


TENSIONED SYSTEM USING CORD TIDY

If the blind is fitted with a continuous loop chain then a cord tidy will be attached to the chain. This must be fitted to the wall as shown.

FITTING A SIDE FIX CORD TIDY

The cord tidy is a two piece device and will arrive with a disposable red tab fitted to it.

Remove the disposable red tab by disengaging it from the chain and then pull out the disposable red tab.

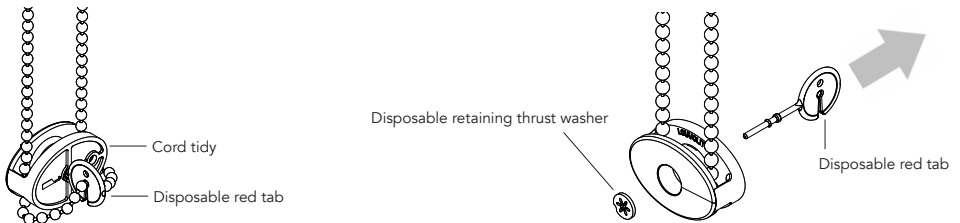


Position the cord tidy to the wall at the furthest distance below the roller tube adding appropriate tension to the chain and mark its location.

Split the cord tidy and mark the remaining offset hole position before drilling and plugging both location holes if necessary.

Screw into the offset hole to fix the back piece of the cord tidy to the wall. Re-assemble the cord tidy with the chain and fix it in previously marked position with a screw through the centre hole.

Push fit a cover cap over the screw hole opening.

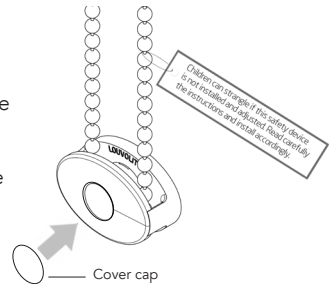


FITTING A FACE FIX CORD TIDY

Position the face fix cord tidy to the wall at the furthest distance below the headrail adding appropriate tension to the chain and mark its location.

Mark the remaining hole position before drilling and plugging both location holes if necessary.

Attach the cord cover plate with the screw provided.

Push fit a cover cap over the screw hole opening.

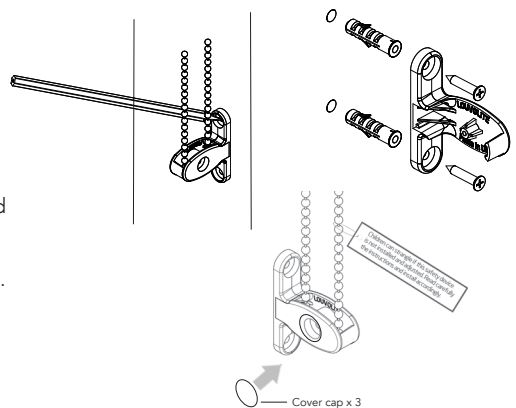


OPERATING THE BLIND.

In order to lower the blind, pull the rearmost length of chain downwards with a smooth and steady pressure. To roll the blind up do the same on the front length of chain.

For a reverse roll blind the opposite is true, to lower use the front chain and to raise, use the rear chain.

CHILD SAFETY - BS EN 13120 GUIDELINES FOR CORDED BLINDS

Tensioned System with Cord Tidy

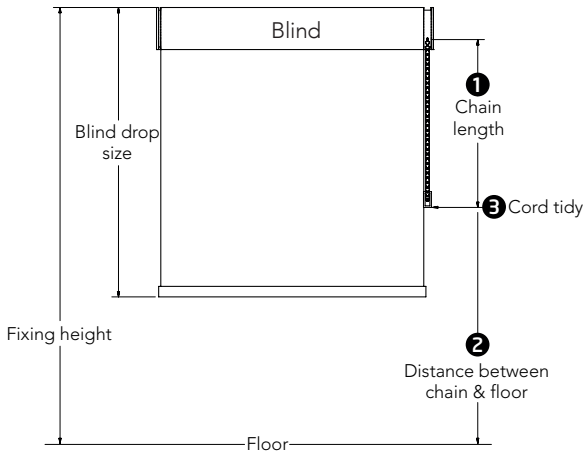

- | | |
|---|---|
| 1 | If fixing height is unknown <ul style="list-style-type: none">- Blind drop \leq 2.5 metres, the chain length must be \leq 1 metre.- Blind drop $>$ 2.5 metres, the chain length must be drop of blind minus 1.5 metres. |
| 2 | If fixing height known <p>All blind drop sizes, distance between floor and bottom of chain must be greater than 1.5 metres.</p> |
| 3 | Cord tidy <p>Affix a cord tidy to the wall at the maximum distance possible from the blind control mechanism ensuring all operating cords are taut (chain no more than 50mm apart at entry/exit of cord tidy).</p> |