

ROLLER SYSTEM 32®/40®/40+®/45® GUIDE WIRE

Fitting & Operating Instructions


Carefully unwrap the roller blind and its associated brackets.

FITTING THE BRACKETS

To work out the distance required between each bracket you will need to first measure the fabric width, e.g 1500mm.


Add to this an allowance for the control and idle end of 35mm, e.g = 1535mm.

1535mm would be the measurement from the outside of one bracket to the outside of the other bracket. (fig.1)

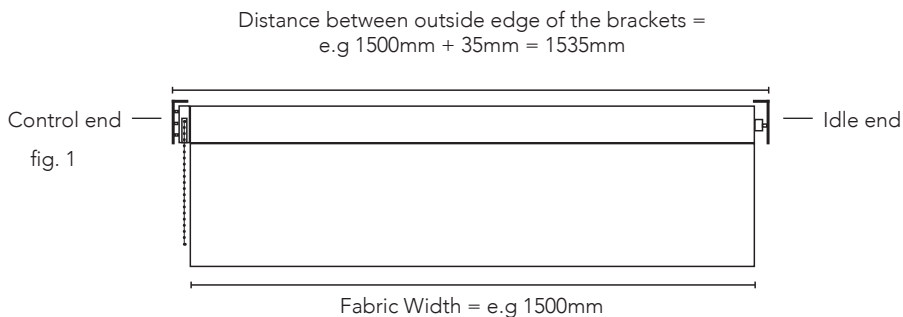


Use this figure to position the outside of your brackets accordingly whether inside of the recess (fig. 2) or outside of the recess (fig. 3)

Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

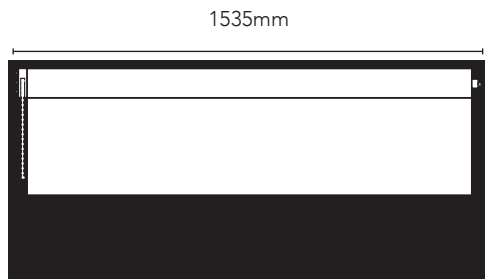

Inside the recess

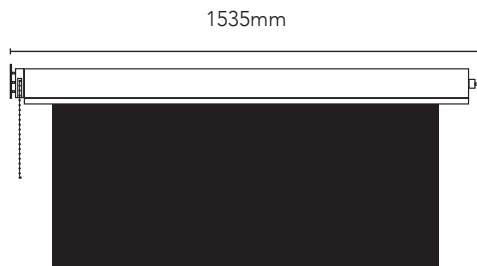


Outside the recess

FIXING THE GUIDE WIRE BRACKET (R8166/88) TO THE ROLLER BLIND BRACKET

These brackets are universal for left hand or right hand, face fix or top fix - to suit the roller blind brackets and they should be fitted with the screws supplied.

Universal Guide Wire Bracket

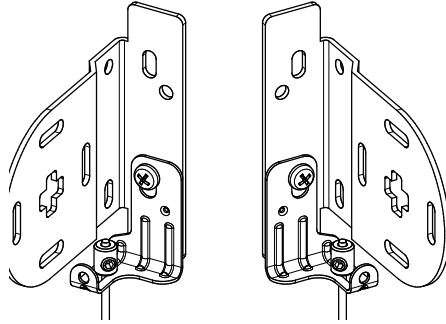


FACE FIXING

The guide wire bracket is fixed onto the face and will locate and fix into the base hole of the roller blind bracket - not the slot - on both sides with the supplied fixing screws.


TOP FIXING

The guide wire bracket is fixed to the back face of the roller blind bracket. This will then locate and fix into the back hole of the roller blind bracket (not the slot) on both sides with the appropriate fixing screw.

Face Fix - Right Hand Bracket

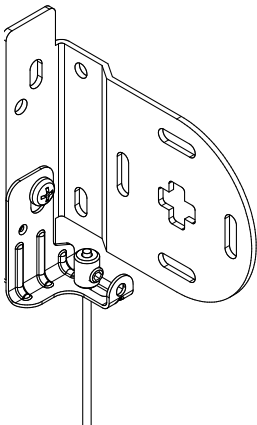

Top Fix - Right Hand Bracket

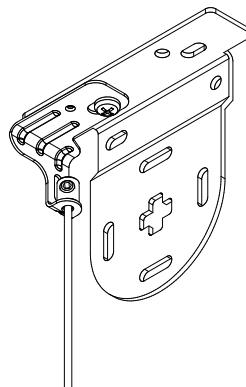


An allowance is required for the bracket to be fixed away from the back of the recess. This is dependant on what system is to be used:

System 32 - Allow 10mm


System 40 - No allowance

System 45 - Allow 5mm

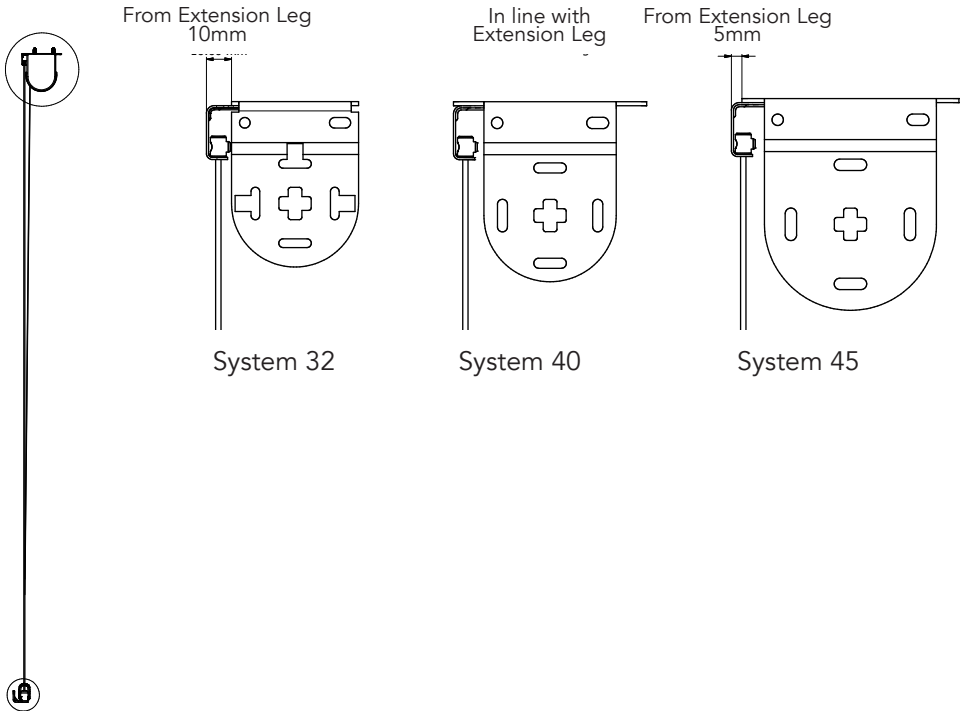


FITTING THE GUIDE WIRE AND BLIND

 Attach a barrel clamp (R8190) to one end of an appropriate length of guide wire. Feed it from the top and down through the hole in the base of the guide wire brackets.



Face Fix Base

 


Base

Place the roller blind into its brackets and deploy it to the bottom position.

Feed the wire through the end cap slot and down through the top cover. Attach a barrel clamp over the guide wire and pull taught to suit the drop. Tighten the barrel clamp and cut off the excess wire. Slide fit the top cover over the base plate.

Base Plate and Covers

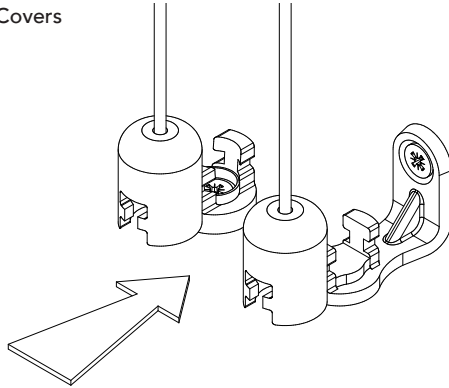

Place and align the base plate and cover into the end caps and mark the correct position where it has to be fixed - this could be face or base fixed. Remove the top cover and then fasten the base plate with a No 6 screw.

Do this to both guide wires

OPERATING THE BLIND.

For a conventional roller blind, in order to lower the blind, pull the rearmost length of chain downwards with a smooth and steady pressure. To roll the blind up do the same on the front length of chain.

For a reverse roll blind the opposite is true, to lower use the front chain and to raise, use the rear chain.

NOTE TO INSTALLER:

Please ensure a general child safety warning tag is fitted on the product.

CHILD SAFETY


Unless your blind is motorised has a safety wand or is crank operated your blind will be supplied with either Easybreak® connectors attached to the operating chain, or a cord tidy that will need to be fitted to the wall.

EASYBREAK® SYSTEM

Two Easybreak® connectors are connected to the operating chain 200mm apart. This ensures that at least one of them will be in the vertical position ensuring they perform as required.

If excessive weight is applied within the loop an Easybreak® connector will break apart.

If an Easybreak® connector comes apart then it will need to be re-connected. To re-connect, check the Easybreak® connector for damage. If undamaged, re-connect the chain by inserting the last ball on the end of the chain into the larger hole of the connector and push it into place.

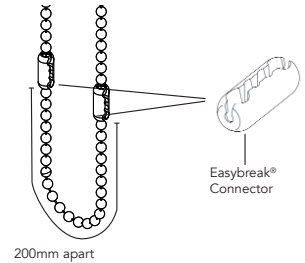


TENSIONED SYSTEM USING CORD TIDY

If the blind is fitted with a continuous loop chain then a cord tidy will be attached to the chain. This must be fitted to the wall as shown.

FITTING A SIDE FIX CORD TIDY

The cord tidy is a two piece device and will arrive with a disposable red tab fitted to it.

Remove the disposable red tab by disengaging it from the chain and then pull out the disposable red tab.

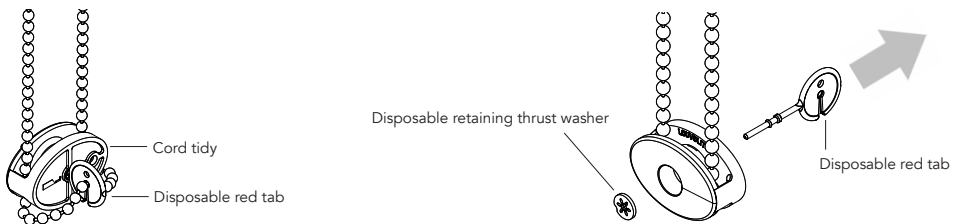


Position the cord tidy to the wall at the furthest distance below the roller tube adding appropriate tension to the chain and mark its location.

Split the cord tidy and mark the remaining offset hole position before drilling and plugging both location holes if necessary.

Screw into the offset hole to fix the back piece of the cord tidy to the wall. Re-assemble the cord tidy with the chain and fix it in previously marked position with a screw through the centre hole.

Push fit a cover cap over the screw hole opening.

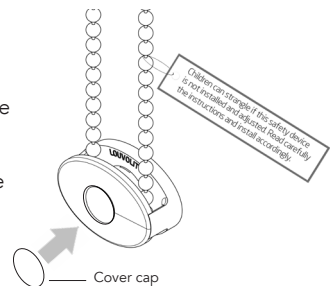

FITTING A FACE FIX CORD TIDY

Position the face fix cord tidy to the wall at the furthest distance below the headrail adding appropriate tension to the chain and mark its location.

Mark the remaining hole position before drilling and plugging both location holes if necessary.


Attach the cord cover plate with the screw provided.

Push fit a cover cap over the screw hole opening.


OPERATING THE BLIND.

In order to lower the blind, pull the rearmost length of chain downwards with a smooth and steady pressure. To roll the blind up do the same on the front length of chain.

For a reverse roll blind the opposite is true, to lower use the front chain and to raise, use the rear chain.

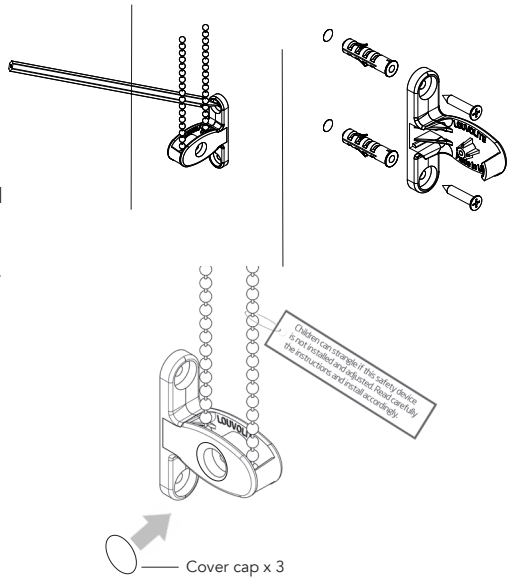

Tensioned System with Cord Tidy

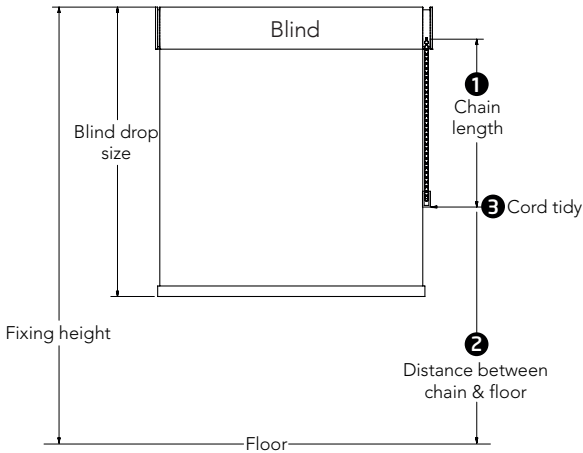

- | | |
|----------|---|
| 1 | If fixing height is unknown <ul style="list-style-type: none">- Blind drop \leq 2.5 metres, the chain length must be \leq 1 metre.- Blind drop $>$ 2.5 metres, the chain length must be drop of blind minus 1.5 metres. |
| 2 | If fixing height known <p>All blind drop sizes, distance between floor and bottom of chain must be greater than 1.5 metres.</p> |
| 3 | Cord tidy <p>Affix a cord tidy to the wall at the maximum distance possible from the blind control mechanism ensuring all operating cords are taut (chain no more than 50mm apart at entry/exit of cord tidy).</p> |