

ROLLER SYSTEM 40®/45® DUAL BRACKET SET

Fitting & Operating Instructions

IMPORTANT

The two blinds that are to be fitted must be a right hand control blind and a left hand control blind. The right hand control blind must be a normal roll blind but the left hand control blind must be made as a reverse roll blind.

FITTING

The right hand side control blind will be installed in the lower (to the rear or nearest the glass) fitting on the bracket.

The brackets have two straight edges. One is shorter than the other (short side 125mm and the longer side 140mm long).


Secure each of the brackets to the wall (back fix) or ceiling (top fix) with the longer side at the back of the fitting with the shorter side along the top.

These brackets should be installed level with each other recess size apart (or cloth size plus 35mm).

This will result in the right-hand bracket with a control end fitting at the rear (and lower) position on the bracket. The other bracket will be opposite with an idle end fitting to the rear (and lower) position.

Now the right-hand control blind (normal roll) can be installed into the lower (nearest the glass) fitting. Then the left hand control blind (reverse roll blind) can be installed in the upper (farthest from the glass) fitting.

Once installed operate both blinds and ensure they work easily and without contact with each other.

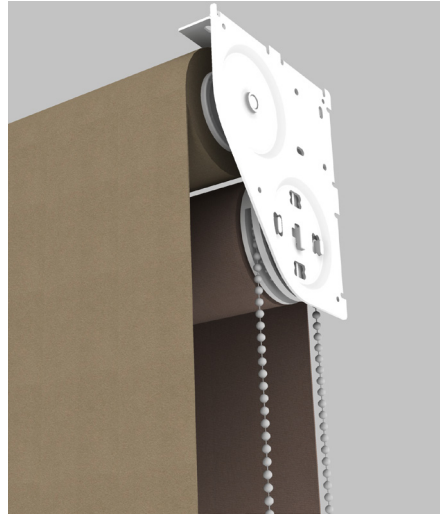


DUAL BRACKET SET

Fitting & Operating Instructions

FITTING A SIDE FIX CORD TIDY

The cord tidy is a two piece device and will arrive with a disposable red tab fitted to it.

Remove the disposable red tab by disengaging it from the chain and then pull out the disposable red tab.

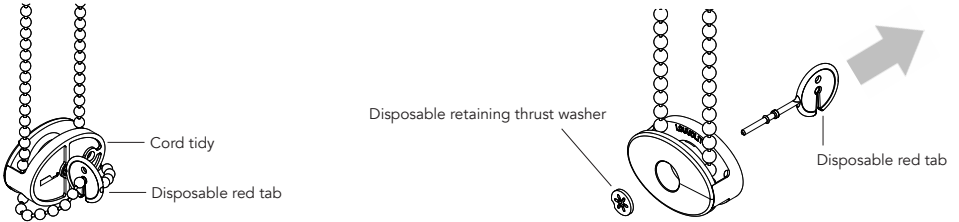


Position the cord tidy to the wall at the furthest distance below the roller tube adding appropriate tension to the chain and mark its location.


Split the cord tidy and mark the remaining offset hole position before drilling and plugging both location holes if necessary.

Screw into the offset hole to fix the back piece of the cord tidy to the wall. Re-assemble the cord tidy with the chain and fix it in previously marked position with a screw through the centre hole.

Push fit a cover cap over the screw hole opening.

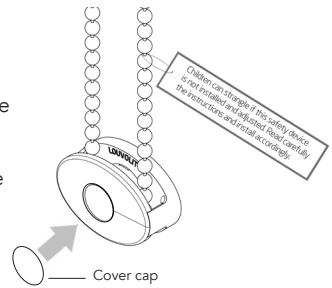

CHILD SAFETY - BS EN 13120 GUIDELINES FOR CORDED BLINDS

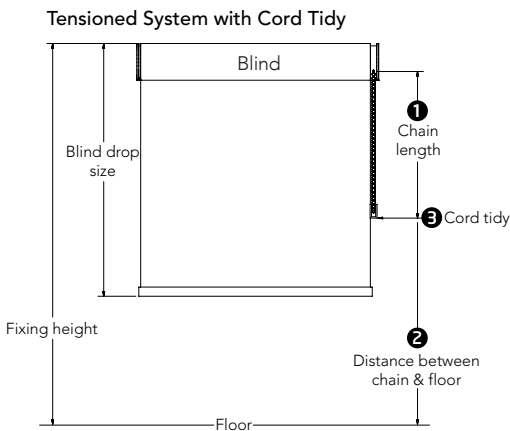

- 1 If fixing height is unknown**

 - Blind drop \leq 2.5 metres, the chain length must be \leq 1 metre.
 - Blind drop $>$ 2.5 metres, the chain length must be drop of blind minus 1.5 metres.
- 2 If fixing height known**

All blind drop sizes, distance between floor and bottom of chain must be greater than 1.5 metres.
- 3 Cord tidy**

Affix a cord tidy to the wall at the maximum distance possible from the blind control mechanism ensuring all operating cords are taut (chain no more than 50mm apart at entry/exit of cord tidy).