


# R1730 REMOTE - FOR USE WITH R1725 MOTOR

## Operating Instructions

### PORTABLE 15 CHANNEL REMOTE UNIT

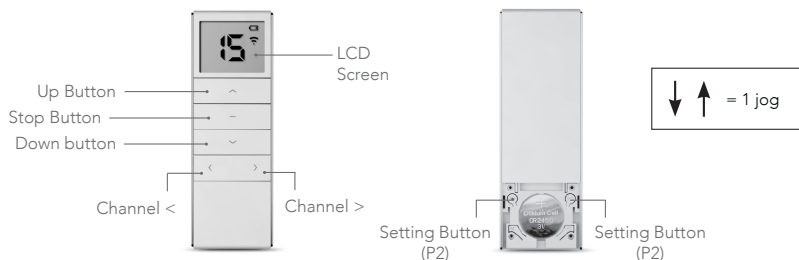

### STEP 1 - PAIRING THE HANDSET WITH THE MOTOR

Note: During the setting procedure, the time between two operations must not exceed 4 seconds as this will cause the setting up process to quit.

- Switch on the power to the motor.
- Remove the battery cover on the reverse of the remote. There are two setting buttons (P2) on either side of the battery. You can use either one during the setting process.
- Select a channel from 1 - 15 on the remote by pressing channel up or down (< or >).
- Press the button on the motor and the motor will jog up and down.
- Press P2 twice then the up or down button once. The motor will jog and beep.
- The motor and remote are now paired.
- To change direction press and hold the button on the motor for 3 jogs.

### STEP 2 - SETTING THE LIMITS

Select the same channel and set the top limit.

- Press P2, then the up button followed by P2 again, the motor will jog on each action and the motor will beep 4 times.
- Press the up button and the blind will start to rise.
- Press P2 and the blind will go into slow jog mode.
- Press the stop button on the remote and the blind will stop.
- Hold the stop button down until the motor jogs once, this will set the top limit.
- Press the down button and the blind will start to go down.
- Press P2 and the blind will go into slow jog mode.
- Press the stop button on the remote and the blind will stop.
- Press and hold the stop button down until the motor jogs once, this will set the lower limit and the motor will beep.

Setting is complete. For more blinds, select another channel on the remote and repeat from step 1.

### FINE TUNING TOP AND BOTTOM LIMITS

- Run the blind to the limit that requires adjustment.
- Press the up and down button together and keep them held down until the motor jogs.
- Move the blind to the new desired position. Press and hold stop until the motor jogs
- The new limit position has been set.

### SETTING BUTTON (ON THE MOTOR)

- Short press of the motor button will run the blind up/down - this only works when the limits are set.

### PAIRING THE HANDSET

- Press and hold the motor button until the blind jogs once.

### RF SIELDING


- Press and hold the motor button until the blind jogs twice. This disables the RF reception. To enable the RF reception again, short press on the motor button.

### CHANGE DIRECTION

- Press and hold the motor button until the blind jogs 3 times.

### FACTORY RESET

- Press and hold the motor button until the blind jogs 4 times

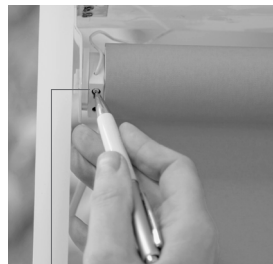

Motor Button

## STEP 3 - SETTING A THIRD POSITION

- Move the blind using the up and down buttons on the remote to the desired position
- If you require any fine tuning of the mid position, you can enter the jog mode by pressing P2, up and then down. To exit jog mode, press P2, up and then down.
- To set the mid position, press P2, stop and stop again. The mid position is now set.
- To delete the mid position, press P2, stop and stop again. The mid position is now deleted.

## SPEED ADJUSTMENTS

- The motor has three different speeds.
- To speed the motor up press stop and up together until the motor jogs.
- To slow the motor down press stop and down together until the motor jogs.
- If the motor does not jog it is at its maximum or minimum speed already.

## DELETING ALL LIMITS

- To delete all limits, press P2 followed by the down button then press P2 again, the motor will jog.

## DELETING A HANDSET

- To delete a handset, press P2 then the stop button followed by P2 again, the motor will jog.

## ADDING A HANDSET

- To add a handset, press P2 then P2 again on the existing handset. Then press P2 on the new handset, the motor will jog.
- To copy blinds to the same channel, press P2 twice on the existing channel and then P2 on the new channel - blind is now on both channels

### Technical specification

Input voltage: 3V (CR2450)  
Transmitting frequency: 433MHz  
Transmitting power: 10 milliwatt  
Operating temperature: -10°C to 50°C  
Transmission distance: 200 metres open office, 35 metres on two walls

### CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

### Notice:

Do not expose the unit to moisture or heat. When you use the control unit, if emission distance is short and less effective, please replace battery. Please recycle batteries.