



FITTING CORNER JOINTS

Assemble the bottom of a frame using 2 corner joints (PFR4026). Do this by sliding the joints into your frame section.

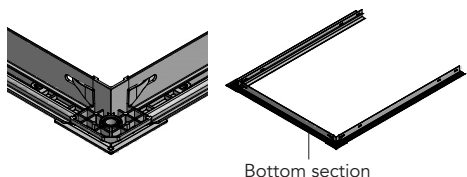


FITTING PUSH FIT CORNER JOINTS

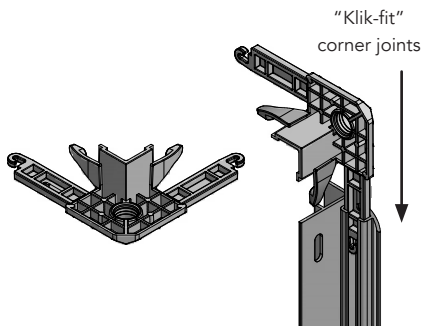

BLIND ASSEMBLY

Slide the chain end joint into the opposite end. Once assembled, slide the roller blind over the end set assembly until it will go no further.

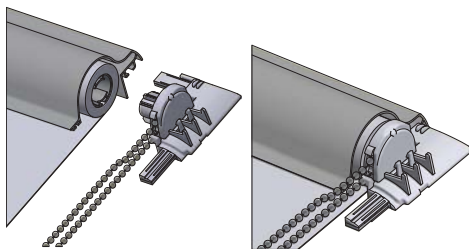

FITTING CURVED TOP SECTION

Slide top of curved section into the rest of the frame, ensuring that end caps are located into the side channel.



FIXING THE CORD TIDY

Please note: Before application of the PX5011 Adhesive pad, all surfaces (PF Frame and PFR2 Chain Tidy) must be cleaned with Alcohol wipe provided and left to dry completely.



Self Adhesive Cord Tidy is recommended for use with 400mm double bead chain loop (R3414-0400)

Clean the frame work with the alcohol wipe provided and stick 2 double sided pads onto the underside of the cord tidy.

Make sure the chain is through the corner cover. Pull the chain taut with the cord tidy attached. Stick the cord tidy onto the frame work.

Any installations with chain loops exceeding 400mm must use R4034 2 part screw fix Cord Tidy.

Recommended for use with double bead chain Loop R3414-0400

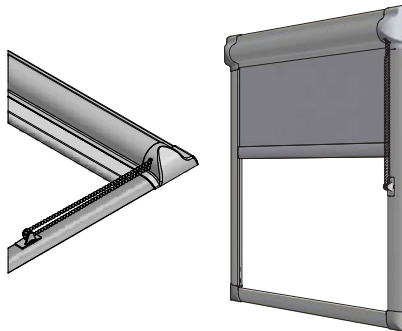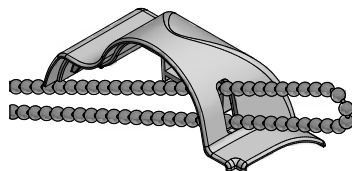

FITTING PERFECT FIT BRACKETS

To ensure all brackets are in the correct position for fitting, use the 85mm side of the fitting card for the bottom brackets. Please use the 122mm side of the card for the top brackets.

For ease of insertion, use a lubricant in the form of washing up liquid on the base of each bracket. Line up the bracket with the base or top of the fitting card (depending on which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window.

Repeat for all 4 corners of the window, and intermediate brackets (if required) then clean excess lubricant prior to fitting the frame.

FITTING PERFECT FIT

Line up the holes in the frame with the brackets. Firmly press the frame down onto each bracket. Fit one side at a time for an easier installation.

HOW TO REMOVE THE BLIND

- Return blind to the top of the window.
- Remove 1 side at a time by depressing button in the bracket and sliding the frame out.

Line up bracket
with edge of card

