

PERFECT FIT SHUTTER LITE

Measuring & Fitting Instructions

MEASURING FOR PERFECT FIT SHUTTER LITE

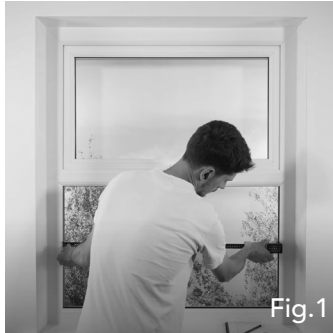
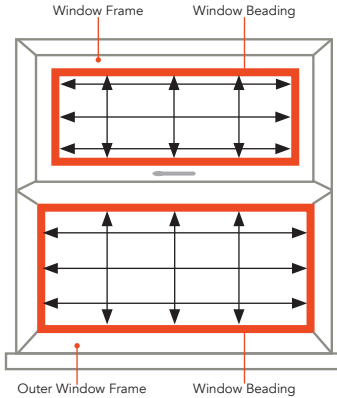


Fig.1



Fig.2

Make sure to record all measurements in millimetres

The Perfect Fit framework needs a minimum of 23mm from the edge of the glass and any obstruction, eg: handles.

1. Measuring from bead to bead take 3 measurements from the bottom, middle and top. Make a note of the smallest measurement accurate to the nearest millimetre. (Fig.1)
2. Do the same for the bead to bead height, taking measurements from the left, middle and right. Make a note of the smallest measurement to the nearest millimetre.
3. Place a credit card over the corner of the window where the glass meets the beading and take a note of the measurement from the glass to the edge of the card, this will be your bead depth and will determine what size bracket to use. (Fig.2)
4. Repeat steps 1-3 for the top window. (Fig.3)
5. If the window has a handle then take a measurement from the left hand beading to the centre of the handle plate and make a note of the measurement. (Fig.4) If your handle is on the left or right hand side of your window, then measure from the beading upwards to the centre of the handle plate.
6. If your window is over the maximum shutter size of 750mm, measure your window as normal and divide into the number of panels.

Note: You cannot have panels join where there is a window handle.

Note: If your drop is more than 900mm you will need a middle bracket, if the bracket hole falls where the handle plate is then move the bracket hole up or down to avoid the obstruction.


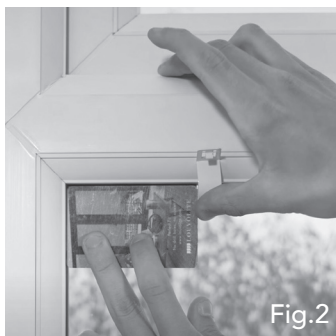


Fig.3



Fig.4

INSTALLING PERFECT FIT SHUTTER LITE

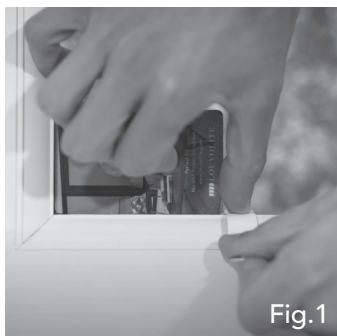

1. Using a credit card as a guide slot a bracket into the corner of each gasket seal on the bottom window. (Fig.1) (Fig.2) Repeat for the top window. (Fig.3)



2. Once all brackets are in place the shutter is ready to be installed. Line the cut out in the bottom of the frame with the bottom brackets. (Fig.4)
3. Once the bottom of the frame is clipped in, push the top side of the frame into the top brackets. (Fig.5)
4. Repeat steps 1-3 for the top window. (Fig.6)
5. Your Perfect Fit Shutter is now installed.

Visit the Louvolite website to view the links to all of our assembly instructional videos.

 LOUVOLITE

